 



## Shunt trip device

Description	For use with	Type	Cat. no.	List
Side mounting on the <b>right</b> (Can not be used together with the undervoltage trip device)  <b>Shunt Trip No Auxiliaries</b>	MBS32... and MBS63...	24V 50/60Hz	MAALRA1	\$48
	MBS32... and MBS63...	48V 60Hz	MAALRAF	48
	MBS32... and MBS63...	48V 50Hz / 60V 60Hz	MAALRAG	48
	MBS32... and MBS63...	110/127V 50Hz / 120V 60Hz	MAALRAJ	48
	MBS32... and MBS63...	208V 60Hz	MAALRAM	48
	MBS32... and MBS63...	220/230V 50Hz / 240/260V 60Hz	MAALRAN	48
	MBS32... and MBS63...	240V 50Hz / 277V 60Hz	MAALRAR	48
	MBS32... and MBS63...	380/400V 50Hz	MAALRAU	48
	MBS32... and MBS63...	415/440V 50Hz / 460/480V 60Hz	MAALRAW	48
	MBS32... and MBS63...	500 V 50Hz / 600V 60Hz	MAALRAY	48
	MBS32... and MBS63...	24 to 60Vdc	MAALRDD	48
	MBS32... and MBS63...	110 to 240Vdc	MAALRDJ	48

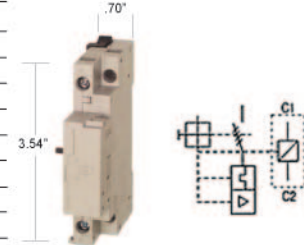


## Undervoltage trip device

 
Description	For use with	Type	Cat. no.	List
Side mounting on the <b>“right”</b> (Can not be used together with the shunt trip device)  <b>Undervoltage Trip No Auxiliaries</b>	MBS32... and MBS63...	24V 50Hz	MARLRAD	\$62
	MBS32... and MBS63...	24V 60Hz	MARLRAC	62
	MBS32... and MBS63...	48V 50Hz	MARLRAG	62
	MBS32... and MBS63...	48V 60Hz	MARLRAF	62
	MBS32... and MBS63...	110/127V 50Hz / 120V 60Hz	MARLRAJ	62
	MBS32... and MBS63...	208V 60Hz	MARLRAM	62
	MBS32... and MBS63...	220/230V 50Hz / 240/260V 60Hz	MARLRAN	62
	MBS32... and MBS63...	240V 50Hz / 277V 60Hz	MARLRAR	62
	MBS32... and MBS63...	380/400V 50Hz	MARLRAU	62
	MBS32... and MBS63...	415/440V 50Hz / 460/480V 60Hz	MARLRAW	62
	MBS32... and MBS63...	500V 50Hz / 600V 60Hz	MARLRDY	62

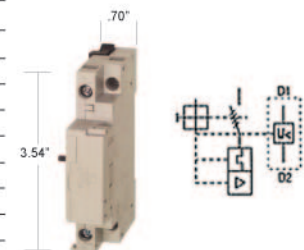

Side mounting on the <b>“right”</b> (Can not be used together with the shunt trip device)  <b>UV Trip with 2 early make auxiliaries Type N.O. *(MBS32 S only)</b>	MBS32S...	24V 50Hz	MAR20LTAD	\$62
	MBS32S...	24V 60Hz	MAR20LTAC	62
	MBS32S...	48V 50Hz	MAR20LTAG	62
	MBS32S...	48V 60Hz	MAR20LTAF	62
	MBS32S...	110/127V 50Hz / 120V 60Hz	MAR20LTAJ	62
	MBS32S...	208V 60Hz	MAR20LTAM	62
	MBS32S...	220/230V 50Hz / 240/260V 60Hz	MAR20LTAN	62
	MBS32S...	240V 50Hz / 277V 60Hz	MAR20LTAR	62
	MBS32S...	380/400V 50Hz	MAR20LTAU	62
	MBS32S...	415/440V 50Hz / 460/480V 60Hz	MAR20LTAW	62
	MBS32S...	500V 50Hz / 600V 60Hz	MAR20LTAY	62

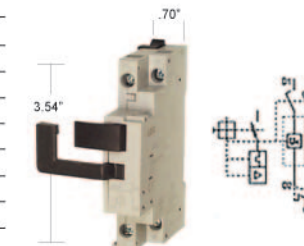 

Side mounting on the <b>“right”</b> (Can not be used together with the shunt trip device)  <b>UV Trip with 2 early make auxiliaries (MBS32H &amp; MBS63H)</b>	MBS32H... and MBS63...	24V 50Hz	MAR20LCAD	\$62
	MBS32H... and MBS63...	24V 60Hz	MAR20LCAC	62
	MBS32H... and MBS63...	48V 50Hz	MAR20LCAG	62
	MBS32H... and MBS63...	48V 60Hz	MAR20LCAF	62
	MBS32H... and MBS63...	110/127V 50Hz / 120V 60Hz	MAR20LCAJ	62
	MBS32H... and MBS63...	208V 60Hz	MAR20LCAM	62
	MBS32H... and MBS63...	220/230V 50Hz / 240/260V 60Hz	MAR20LCAN	62
	MBS32H... and MBS63...	240V 50Hz / 277V 60Hz	MAR20LCAR	62
	MBS32H... and MBS63...	380/400V 50Hz	MAR20LCAU	62
	MBS32H... and MBS63...	415/440V 50Hz / 460/480V 60Hz	MAR20LCAW	62
	MBS32H... and MBS63...	500V 50Hz / 600V 60Hz	MAR20LCAY	62

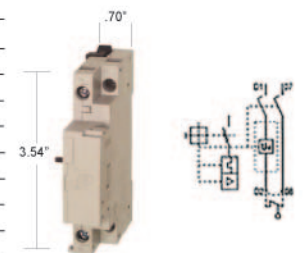 

## Terminal protector

Description	For use with	Type	Cat. no.	List
Protection against accidental finger touch (IP20) for MBS63 manual motor starters	MBS63...		MAPTP63	\$6

Discount Schedule ST