

Main switches - Emergency-off switches - Maintenance switches

6 Pole D						Disconnects with UV trip			
R1	R2	R3	R4	R5	R6	S1	S2	S3	S4
25	32	50	63	115	150	25 ¹⁾	50 ¹⁾	80	150
-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-
A600	A600	A600	A600	A600	A600	A600	A600	A600	A600
690	690	690	690	690	690	690	690	690	690
6	6	6	6	6	6	6	6	6	6
-	-	-	-	-	-	1-4	2.5-10	4-16	10-50 ²⁾
-	-	-	-	-	-	1-2.5	1.5-6	4-16	-
5 x 4	5 x 6	5 x 10	5 x 16	4 x 35	4 x 50	-	-	-	-
35	35	63	80	125	160	25	50	80	160
500	500	690	690	690	690	690	690	690	690
25	32	50	63	115	150	25	50	80	150
690	690	690	690	690	690	690	500	500	500
7.5	15	22	30	55	75	7.5	15	37	37
5.5	11	15	22	37	55	7.5	15	37	37
690	690	690	690	690	690	500	500	500	-
6	6	6	6	6	6	4	4	4	-
12	12	12	12	12	12	16	16	16	-
6/4/3	6/4/3	6/4/3	6/4/3	6/4/3	6/4/3	6/4/3	6/4/3	6/4/3	-
16	16	16	16	16	16	16	16	16	-
0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	-
0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	0.5-2.5	-

¹⁾ See ordering pages

²⁾ With terminal lug