



## OPTIONS

 
### TRANSFORMER

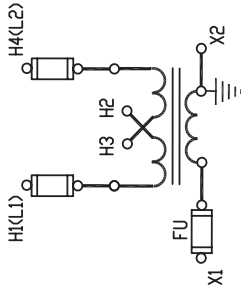





### PILOT LIGHTS

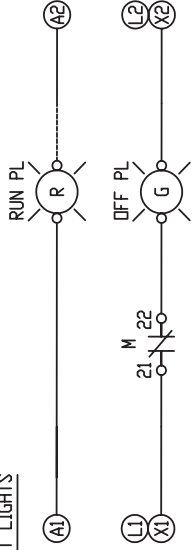


Note: On B05 Overload 95 and 96 terminals are reversed on connection



## CONTROL CIRCUIT

 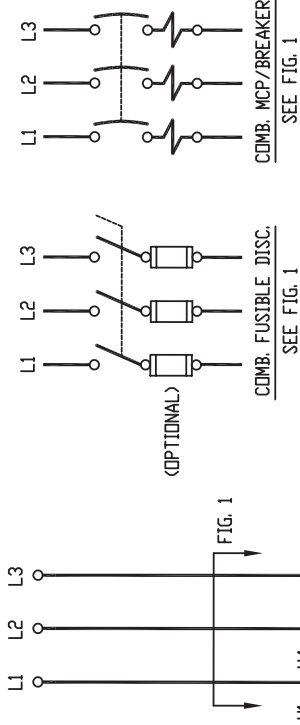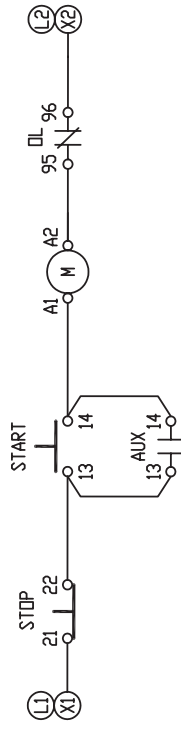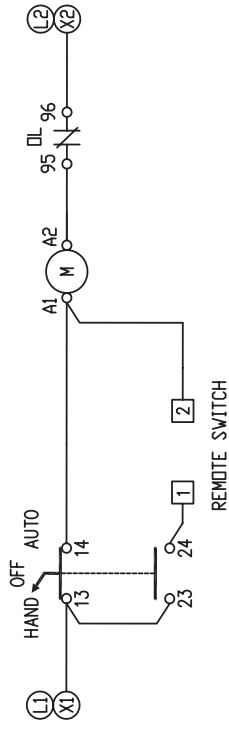

## POWER CIRCUIT

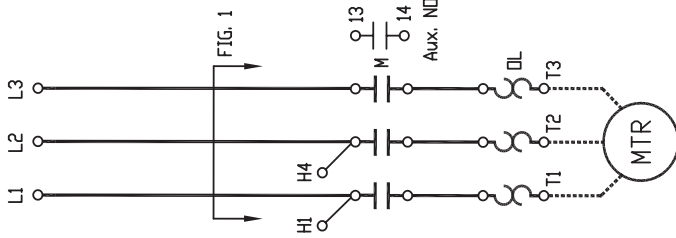

Wiring Diagrams for:  
Across the line starter-  
Combination Starters

