OPTIONS

TRANSFORMER

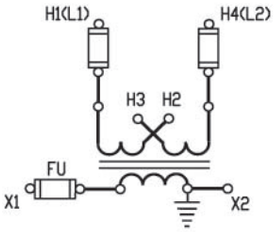

PILOT LIGHTS

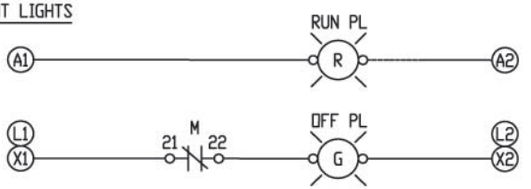

Note: On B05 Overload 95 and 96 terminals are reversed on connection



CONTROL CIRCUIT

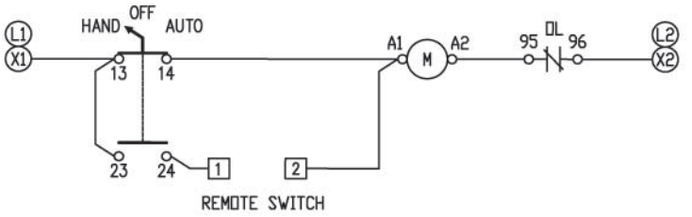

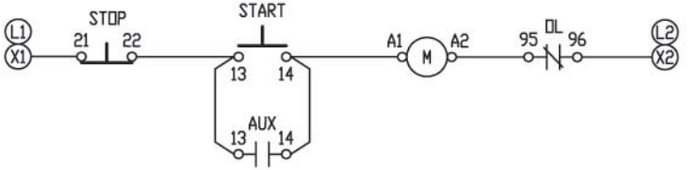

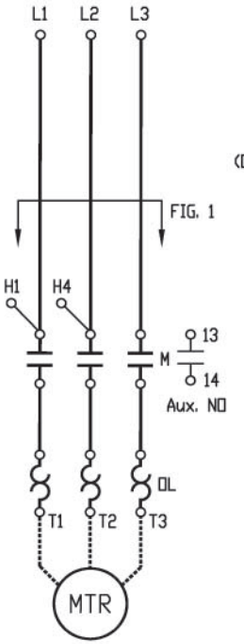

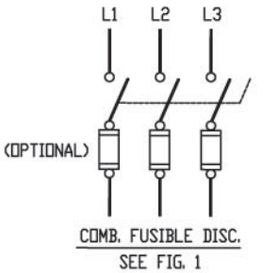

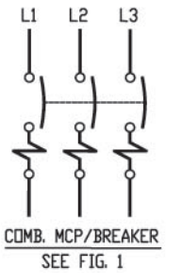

POWER CIRCUIT

Wiring Diagrams for: Across the line starter- Combination Starters

EE CONTROLS